

SETTING THE 24H/DUAL TIME

Pull the winder out to position 1
Turn winder anti-clockwise to set the correct 24H/Dual time.
Push the Winder back to position 0 to activate movement.

NB

Please set the 24H/Dual time on the hour for an accurate setting.

The 24H/Dual time hour hand can be set to show either 24H time or Dual time with another time zone.

The minute hand is used for both the main time / Dual time.



N06


STORM

LONDON

24H/DUAL TIME MODELS

FRONT

DATE POSITION VARIATION

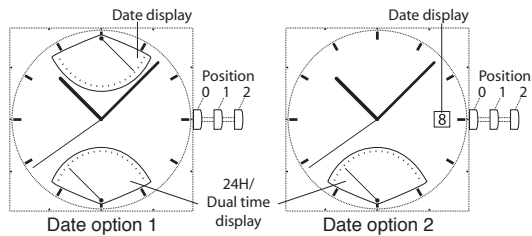

THE DATE POSITION MAY VARY ON THESE MODELS.

FEATURES

Analogue time
24H / Dual time display
Date

SETTING THE MAIN TIME

Pull the winder out to position 2 (second hand stops.)
Turn winder clockwise to set the hour and minute hands to the correct time.

Push the Winder back to position 0 to activate movement.

NB

Turn the hands through a 24H cycle to determine whether setting the time in AM or PM. Date will change after 12AM.

SETTING THE DATE

Pull the winder out to position 1

Turn winder clockwise to set the date.

Push the Winder back to position 0 to activate movement.

NB

Please avoid setting the date between the hours of 9PM and 3AM, as the date may not change on the following day.

BACK