


## BATTERY REPLACEMENT

Some models feature an easy open case back for DIY battery changing.  
Use a coin placed in the slot on the case back to turn in the direction indicated to either open or close. Please make sure case back is closed securely. Battery type : CR2032 (3V)

Battery life is dependant on usage.

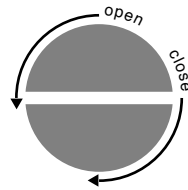

11-09


# STORM

LONDON

LED MATRIX

## DISPLAY

### TIME

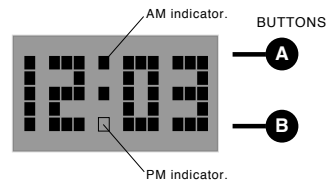

### DATE



Date shown is February 20th.

## READING THE TIME/DATE

Press button A once to view the time  
Press button A twice to view the date.  
NB Date will change automatically at 12AM

## SETTING THE TIME & DATE

Press button A once to show the time.  
Press button B once to enter setting mode.  
Press button A repeatedly to advance HOUR.  
Check the AM/PM indicator is correct.  
Press button B once to set the hour.  
Press button A repeatedly to advance MINUTE.  
Press button B once to set the minute.  
Press button A repeatedly to advance MONTH.  
Press button B once to set the month.  
Press button A repeatedly to advance DATE.  
Press button B once to set the date and EXIT